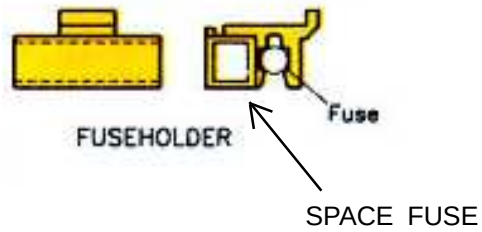SMARTPAK FUSE COMPARTMENT:
TO REPLACE THE FUSE
1. UNPLUG THE PQWER CORD
2. REMOVE FUSE HOLDER
3. NOTE THERE IS A SPACE FUSE PROVIDED